

# JLR Vehicle Power Distribution




## Aftermarket DAB Module Installation

- it is recommended that the power feed for the in2digi D-JV-2 module installation is individually fused by a series placed 5A fuse (not supplied)
- reference should be made to the in2digi website ([www.in2digi.com](http://www.in2digi.com)) for additional installation guidelines

## Power connection

- all of the infotainment elements are ultimately supplied from a “battery” connection (a typical Land Rover circuit configuration is shown and Jaguar vehicles follow the same distribution principle but junction box nomenclatures may be different)
- it is important that the in2digi module receives its power from these same infotainment distributed circuit elements

# JLR Vehicle Power Distribution

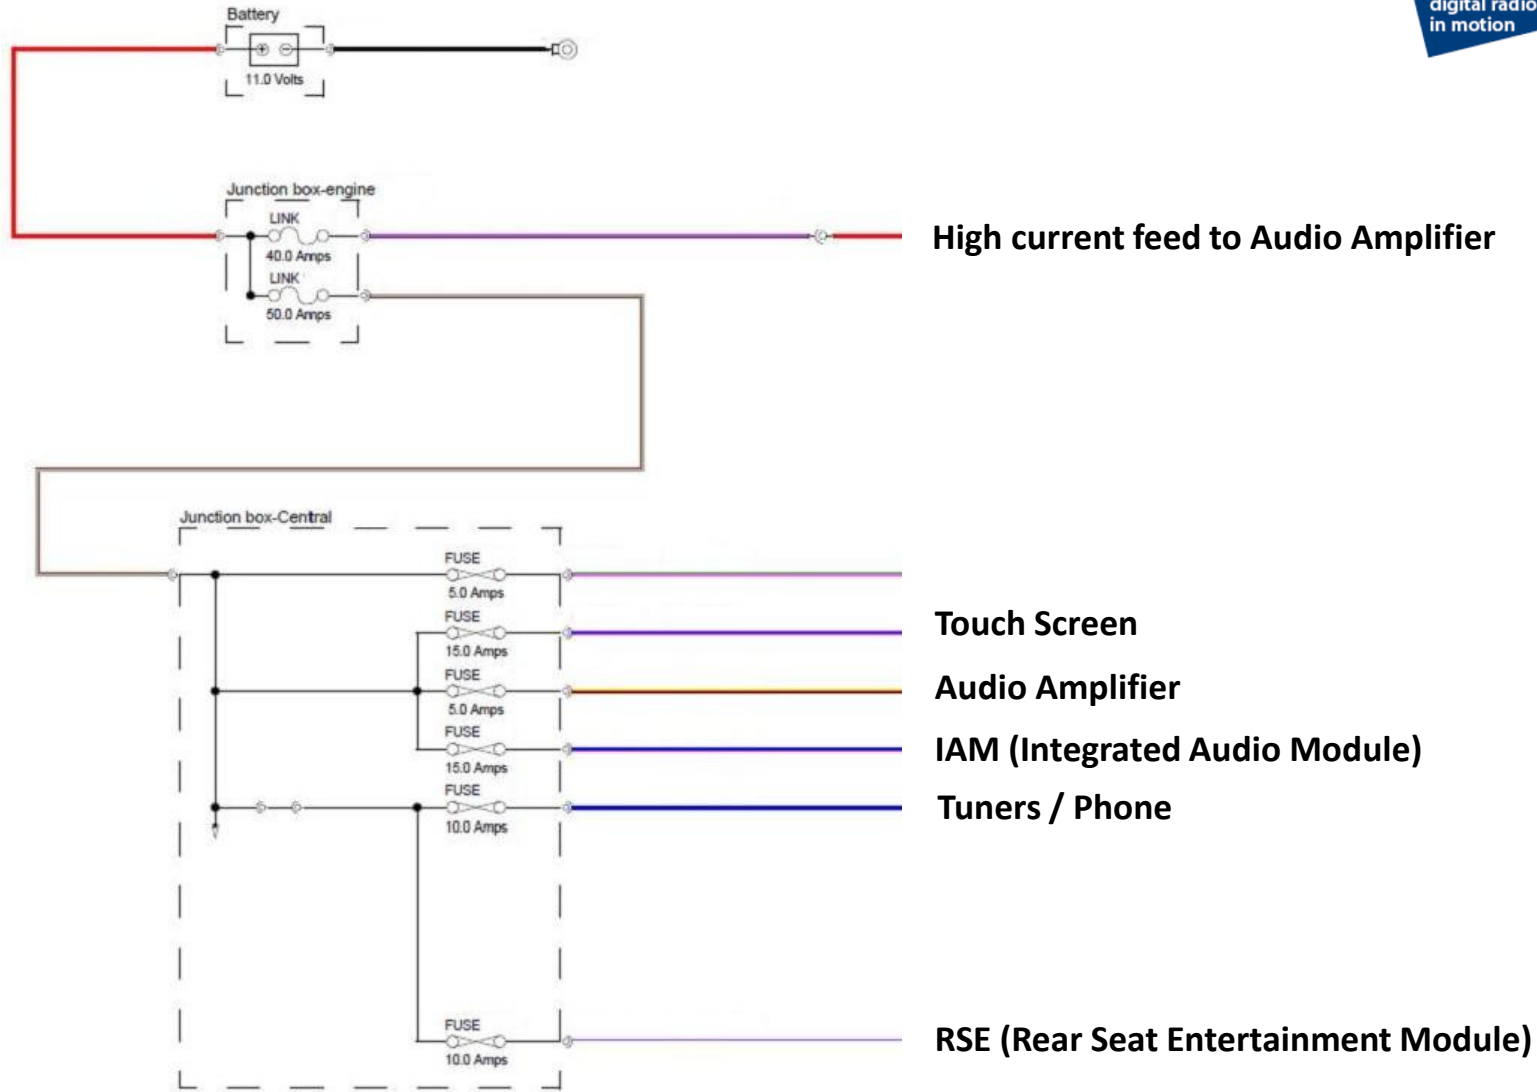

# JLR Vehicle Power Distribution



## Aftermarket DAB Module Installation (vehicle front)

- take a spliced feed from the IAM
  - Batt pin
  - Gnd pin
- 10A minimum fused supply in vehicle

# JLR Vehicle Power Distribution



## Aftermarket DAB Module Installation (vehicle rear)

- take a spliced feed from the Tuners / Phone Module
  - Batt pin
  - Gnd pin
- 10A fused supply in vehicle

OR ....

- take a spliced feed from the Audio Amplifier
  - RBD PWR pin
  - Gnd pin
- 5A fused supply in vehicle